



TOOLS REQUIRED:



Included Multi-Tool

INCLUDED HARDWARE:



x4) Chicago Bolt



x4) Threaded Insert



x4) Bolt Cap*

*Black or Blue, matches body color purchased

PLEASE NOTE: Hardware listed reflects what is required for 1 body sign.



FIG. 1



FIG. 2

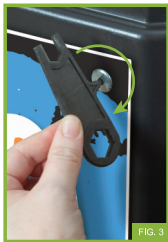


FIG. 3


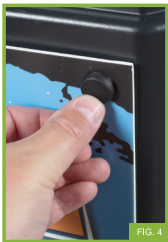


FIG. 4

STEP-BY-STEP INSTALLATION INSTRUCTIONS

- 1 By hand, start to thread the inserts into each of the 4 predrilled holes on the body by turning clockwise, then use included multi-tool to tighten the inserts so they are tight to the body (**FIG. 1 & FIG. 2**)
- 2 Align signage with predrilled holes directly over installed threaded inserts so that all 4 holes align
- 3 Insert 4 Chicago bolts through signage and thread into inserts using multi-tool until snug (**FIG. 3**)
- 4 Push bolt caps over exposed Chicago bolt heads (**FIG. 4**)
- 5 Repeat steps 1 - 4 until desired amount of signage is installed


TOOLS REQUIRED:

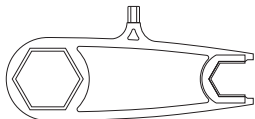

Included Multi-Tool



Slotted Screwdriver

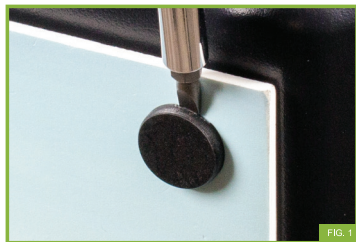

STEP-BY-STEP SIGN CHANGE INSTRUCTIONS

- 1 Using a flat heat/slotted screwdriver, push slotted end into small slot on side of bolt caps and apply slight twisting pressure to the screwdriver to pop off bolt caps (**FIG. 1**)
- 2 Using included multi-tool, turn Chicago bolts counterclockwise to remove all 4 (**FIG. 2**)
- 3 Once Chicago bolts are removed, change out sign(s) and follow installation instructions on page 1